

# HIGH NITRITE PROBE

HN2A SERIES



## FEATURES & BENEFITS

- Affordable real-time nitrite (NO<sub>2</sub>) monitoring
- Ideal for monitoring high levels of nitrite
- Multiple wavelength sensor uses patent-pending technology for superior measurement performance
- Robust submersible probe with titanium or stainless steel housing
- Operator friendly, low-maintenance UV and Visible LED design
- Reagent free optical measurements
- Simple to install and operate

MUNICIPAL DRINKING WATER  
MUNICIPAL WASTEWATER  
INDUSTRIAL PROCESS WATER  
INDUSTRIAL WASTEWATER

WATER QUALITY  
MONITORING  
SOLUTIONS

## REAL-TIME MONITORING SOLUTION

### High Nitrite Probe

Real Tech's robust submersible High Nitrite Probe provides affordable real-time measurement of high levels of nitrite (NO<sub>2</sub>) in water or wastewater. The probe's rugged body is built to withstand harsh environments, with titanium or stainless steel options. Designed to meet the needs of many monitoring applications, the HN2A series offers multiple path length selections for the desired measurement range.

### Controllers and Accessories

Our innovative modular product platform ensures our clients gain the real-time water quality monitoring system that meets their specific demands and budget. With multiple controller and accessory options available such as automatic compressed air cleaning systems that lower maintenance while improving system performance, Real Tech provides a total solution for all of your unique water quality monitoring needs.

### Liquid Ai Compatible

Our Liquid Ai data services complement our real-time water quality monitoring systems. Our Remote Monitoring platform is a powerful data management and visualization tool that enables access to data anywhere, anytime.

## MEASUREMENT PRINCIPLE

Real Tech's High Nitrite Probe utilizes patent-pending technology to provide superior measurement performance across multiple wavelengths of light using UV and Visible LEDs. Many compounds absorb light in the UV-VIS spectrum, and how much the compounds absorb is directly proportional to their concentration. Compounds that may interfere with nitrate and nitrite measurement are compensated for using additional reference wavelengths. Real Tech's innovative High Nitrite Probe is advancing wastewater management.

**REALTECH**  
INC.



# HIGH NITRITE PROBE SPECIFICATIONS

CHARACTERISTIC	TECHNICAL DATA
Path Length	1, 2, 4, 10 mm
Parameters	Nitrite (NO <sub>2</sub> )
Range	Depends on model selected. Refer to range chart.
Accuracy	± 0.5% full scale
Units	mg/L, ppm
Sampling Time	10 seconds
Calibration	Factory calibrated. Field adjustment of calibration is possible.
Cleaning	Automatic compressed air or pressurized water cleaning with optional Probe Clean System
Self-Diagnostics	Detection and diagnosis of internal system fault
Alarms	Continuous detection of leaks, lamp output, humidity, temperature and electrical fault
Humidity Control	Humidity sensor with desiccant pack
Wavelength	UV and visible light wavelengths
Light Source	UV and VIS LED
Electrical/Comm.	From controller
Operating Temp.	0 to 45°C (32 to 113°F)
Housing Material	Titanium or stainless steel
Wetted Materials	Titanium, Epoxy, Sapphire, SS 316L, Viton
Weight	4.6 lb
Dimensions	15" H x 2.0" Diameter
Warranty	2-year limited warranty (Extended care packages available)


\* Technical Specifications are subject to change without notice.

\* Operating (water) temperature absolute maximum 55°C (131°F). Instrument performance reduced when operating outside recommended operating range. Contact Real Tech to verify application.

## DIMENSIONS


The high nitrite probe is a submersible instrument installed directly in-situ using a pole mounting kit or chain mount.

### DIMENSIONS FOR HIGH NITRITE PROBE

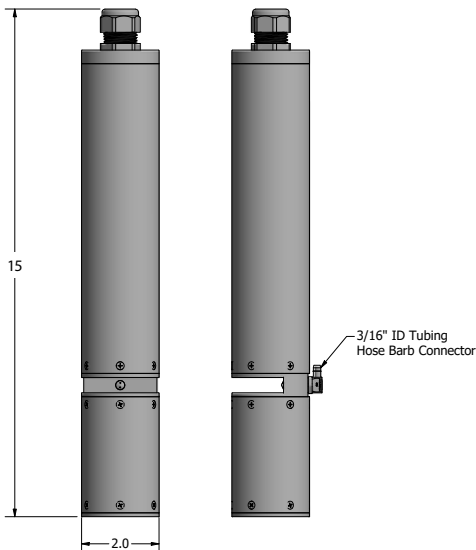

### MOUNTING FOR HIGH NITRITE PROBE

#### Pole mount

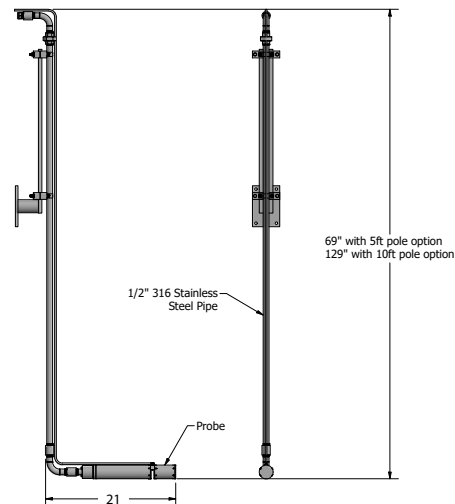

#### Chain mount



## PROBE MODELS & RANGE

Includes titanium (-X) or stainless steel (-S) high nitrite probe sensor and 35 feet of communication cable. Controller, mounting kit and cleaning system sold separately.

MODEL#	PATH LENGTH	NO <sub>2</sub> -N mg/L	NO <sub>2</sub> mg/L
HN2A-X2010 / HN2A-S2010	1 mm	30 - 6000	100 - 20,000
HN2A-X2020 / HN2A-S2020	2 mm	15 - 3000	50 - 10,000
HN2A-X2040 / HN2A-S2040	4 mm	7.5 - 1500	25 - 5000
HN2A-X2100 / HN2A-S2100	10 mm	3 - 600	10 - 2000

\* Stated ranges are based on testing in deionized water. Site specific conditions, such as interfering substances in the water, may limit the measuring range and accuracy. Please contact Real Tech to confirm model selection.

## CONTROLLERS

PRODUCT #	NAME	DESCRIPTION
S-169000	Real Controller	Wall mounted controller with 4-line x 20-character back lit LCD display
S-11TPC	Real Controller Pro	Wall mounted controller with touch panel PC interface (PC inside cabinet model)
S-11TPCD	Real Controller Pro	Wall mounted controller with touch panel PC interface (PC external on door model)

## ACCESSORIES

PRODUCT #	NAME	DESCRIPTION
S-228070	Probe Clean System	Cleaning valve module requires on-site compressed air or pressured water for automatic probe cleaning
S-228080	Compressed Air System	Compressor for air cleaning when compressed air not available on-site
S-219081	Probe Mounting Kit I	Provides secure mounting attachment for titanium or stainless steel probe to a tank wall or open channel wall. No pole included.
S-219082	Probe Mounting Kit II	Provides secure mounting attachment for titanium or stainless steel probe to a tank wall or open channel wall. 5' pole included.
S-219083	Probe Mounting Kit III	Provides secure mounting attachment for titanium or stainless steel probe to a tank wall or open channel wall. 10' pole included.
S-229085	Chain Mount	Stainless steel chain for mounting probe in open channel

### Real Tech Inc.

1150 Champlain Court,  
Whitby, Ontario L1N 6K9 Canada  
TF: 1.877.779.2888 T: 1.905.665.6888  
info@realtechwater.com

**REALTECH**  
INC.